
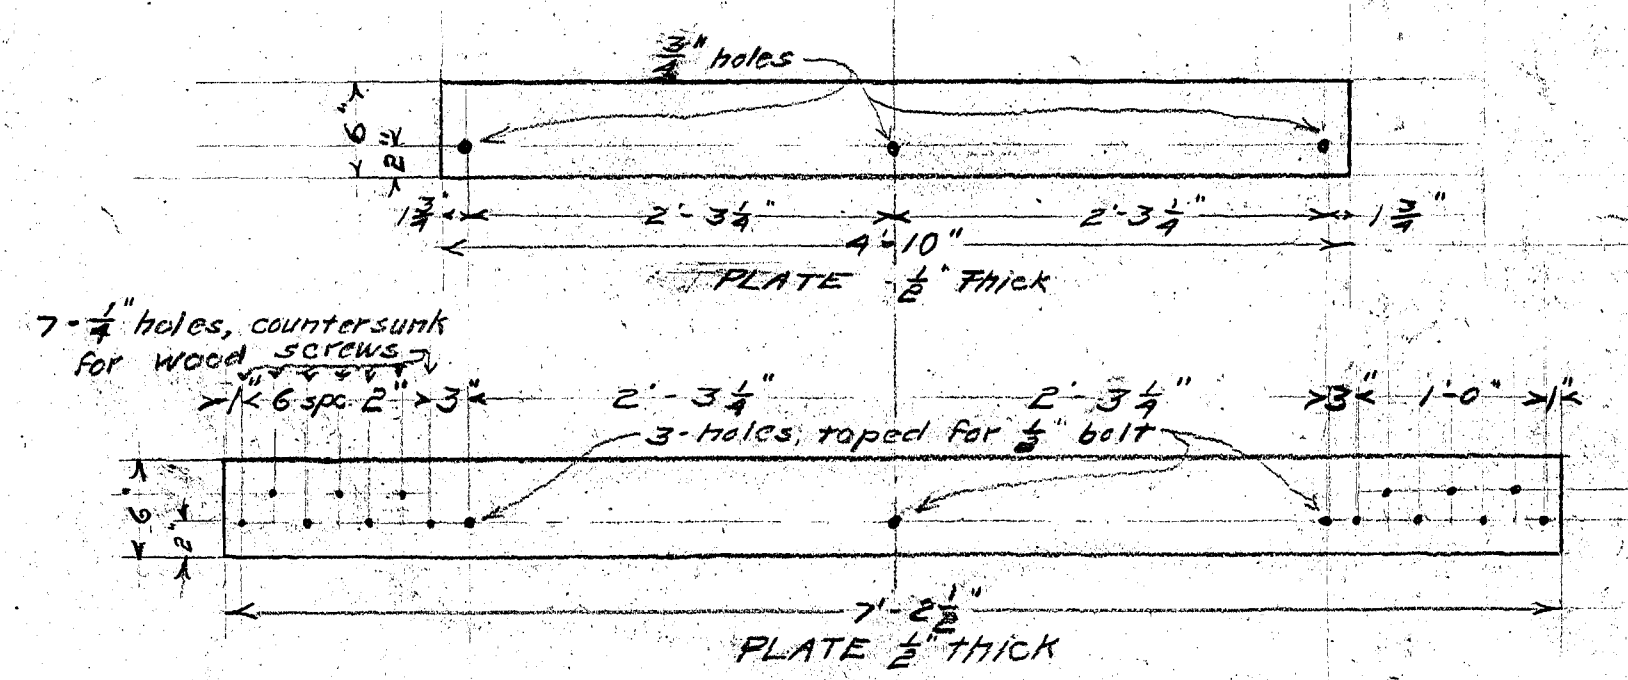
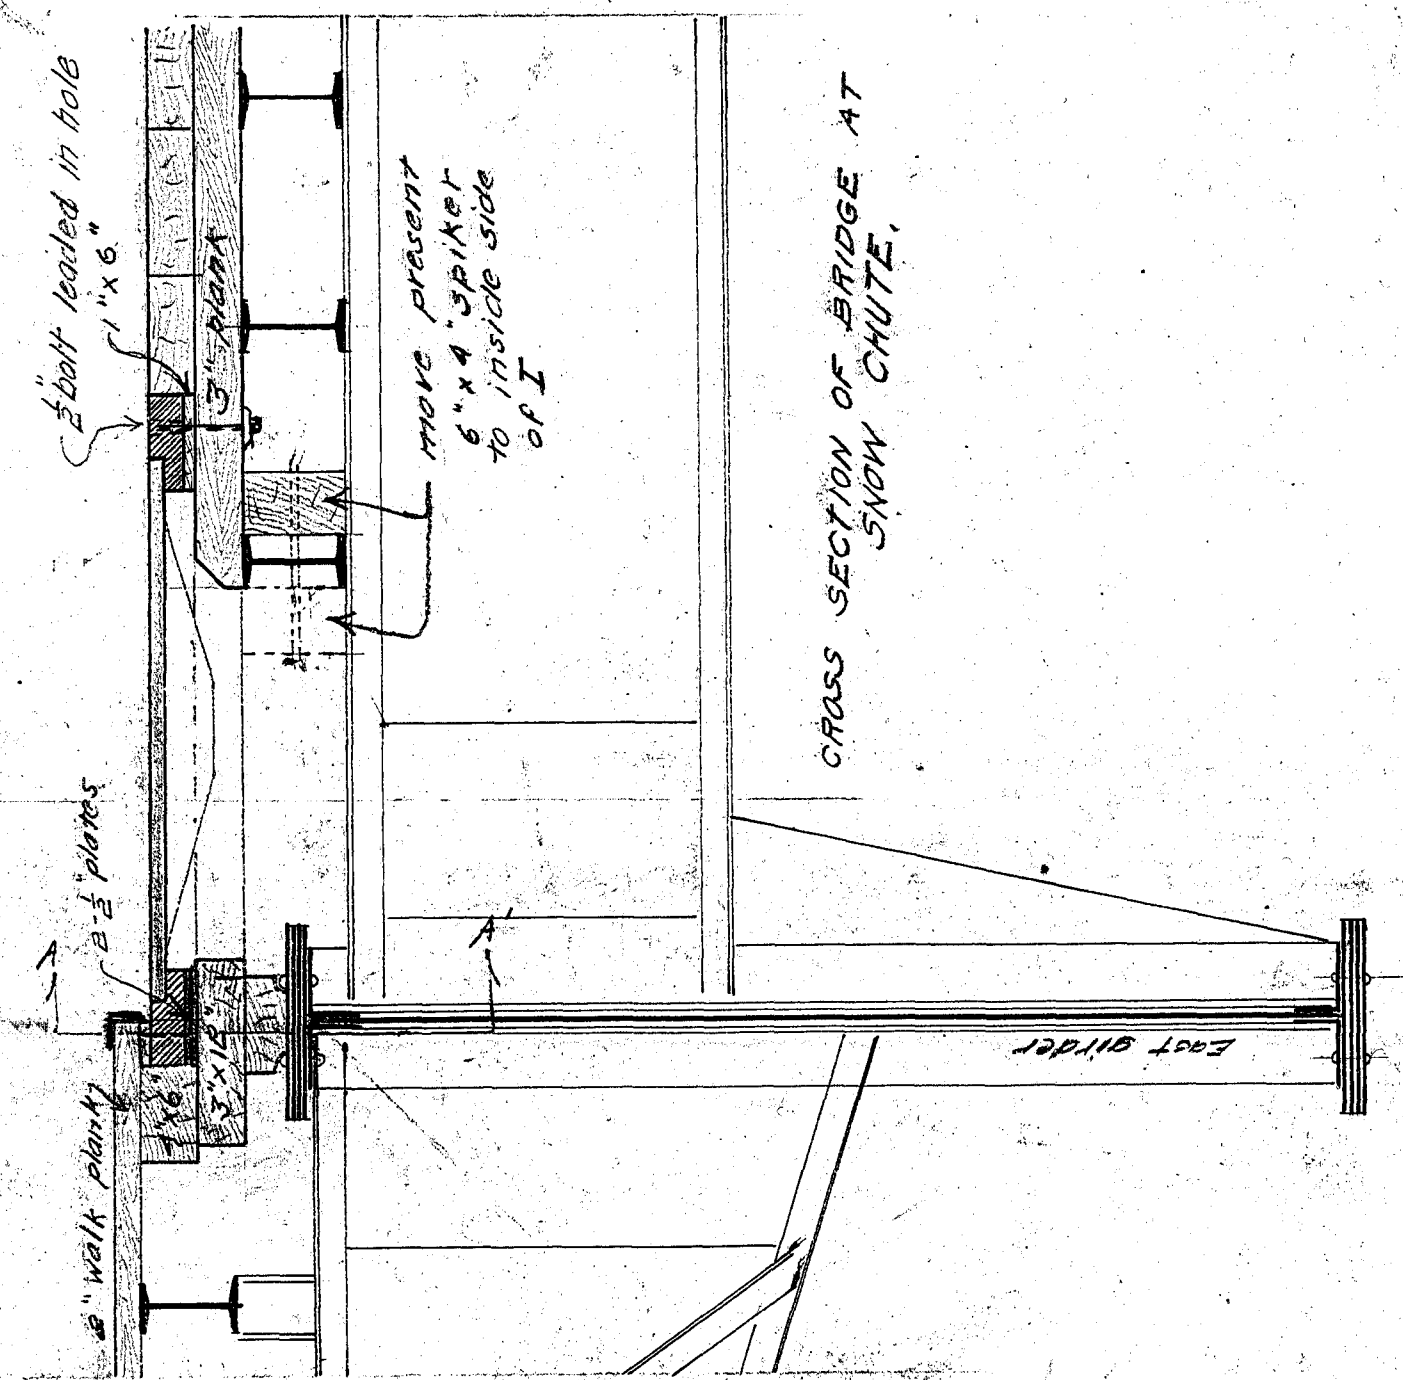
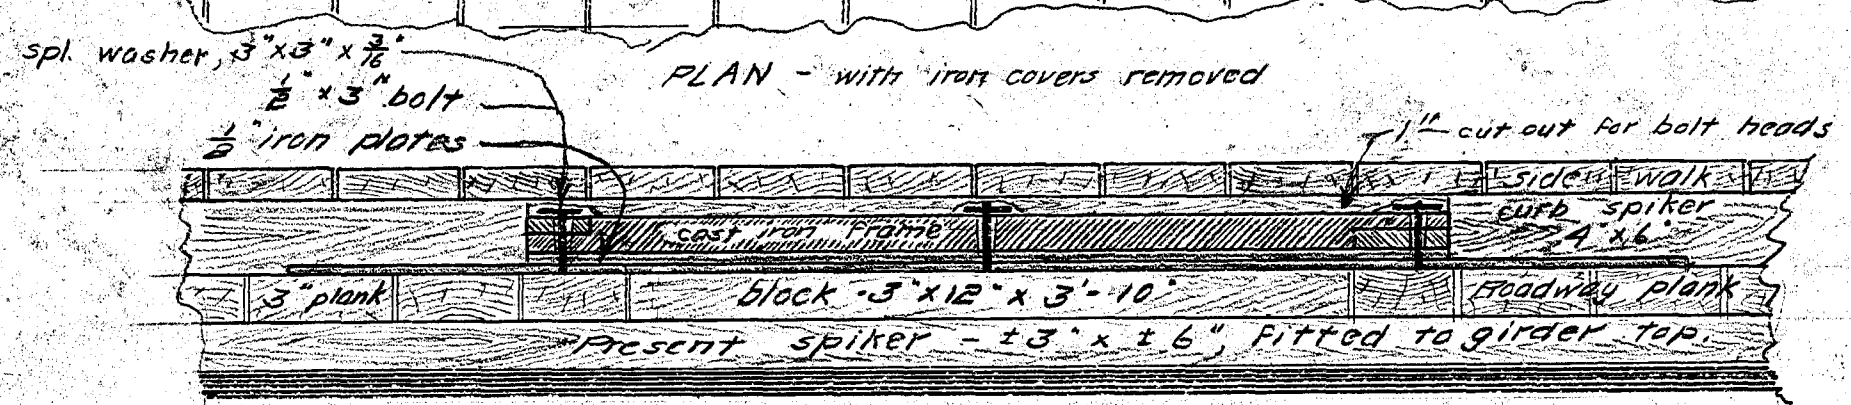


$\frac{1}{2} \times 7$ bolts, set in these holes with heads even with top of casting. Balance of hole filled with lead. Use cast washers + nuts underside floor.

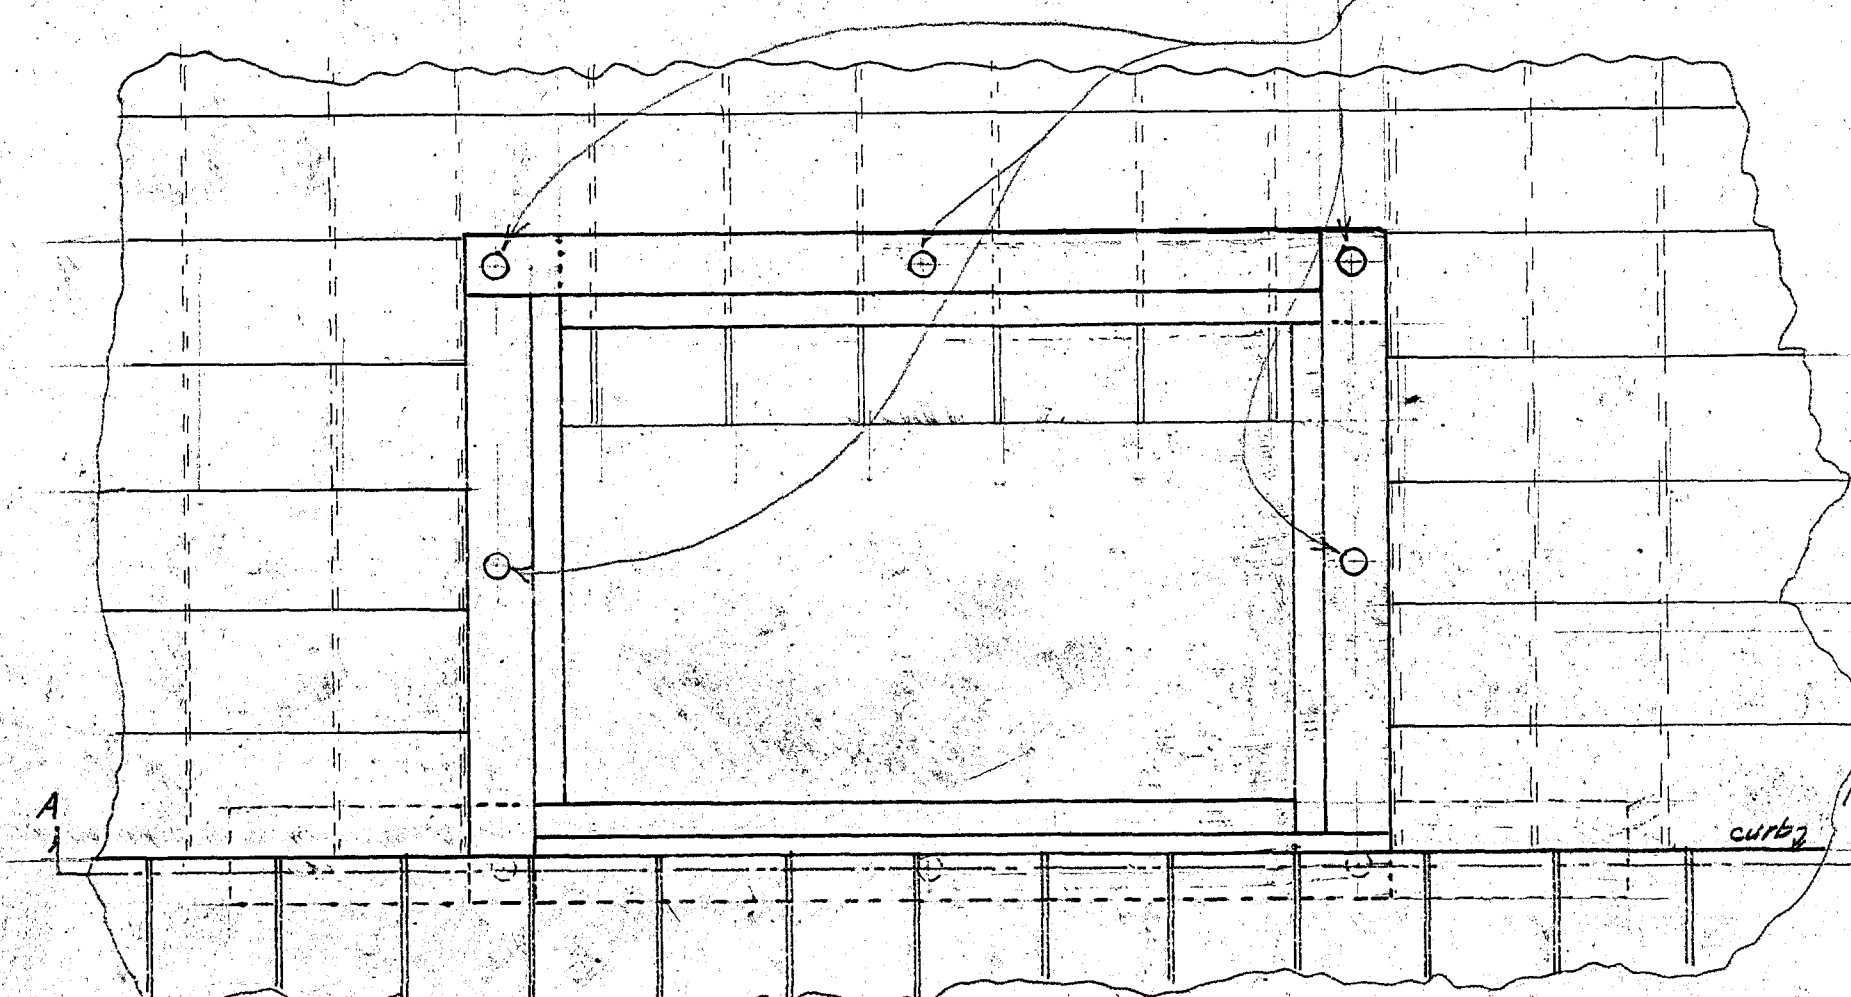

- Furnish material for two snow chutes as follows:-
- 2 std. frames - 8 pcs. - as on plan 04392
 - 4 covers, 11" x 15"
 - 2 plates - $\frac{1}{2} \times 6 \times 7'2\frac{1}{2}$ as above, painted.
 - 2 plates - $\frac{1}{2} \times 6 \times 4'10"$ as above, painted.
 - 6 special washers $\frac{7}{8} \times 3 \times 3$, painted
 - 10 $\frac{3}{4}$ " cast iron washers
 - 6 $\frac{1}{2}$ " bolts, 3" long under head.
 - 10 $\frac{1}{2}$ " bolts, 7" long under head, with nuts
 - 10 lbs. lead.
 - 20 #12 x 3" wood screws, countersunk heads.